

When programming the 16F84 using ICProg or PikLab, the Oscillator and Fuse settings need to be correct. The correct settings for this project are: Oscillator = XT, WDT = Unchecked (off), PWRT = Checked (On) and CP = Unchecked (Off). Make sure these are set properly before programming the PIC, otherwise your mouse adapter won't work.

The finished programmer should look something like this: